

\* Works with most 1996 and newer OBDII& CAN compliant cars, light-duty trucks, SUVs, minivans and hybrid sold worldwide

\* **Support all the 10 OBDII test modes**

\* **Red-Yellow-Green LED lights and build-in speakers** indicate emissions monitor status. They can also help catch intermittent problems or confirm repairs during a drive cycle.

\* **I/M readiness hot keys** make it easy to use this tool right out of the package. -quick display of status of all tests on a single screen

\* Read/ clear stored & pending codes, **switch off Check Engine Light (MIL)** and resets monitors

\* View on-screen fault code definitions (Generic, manufacturer specific, where available) - thousands of definitions stored within the tool software

\* **Look up fault code definitions from the tool's on-board database**

\* Read freeze-frame data engine conditions such as fuel trim, engine coolant temp, etc., at the time the Malfunction Indicator Lamp (MIL) was set (a snapshot of sensor values when a DTC occurred)

\* Read, records, graphs & playbacks real-time live data streams from the engine sensors - ideal for monitoring intermittent faults

\* Graph live engine data on-screen

\* View Oxygen Sensor test results (dependent on vehicle support)

\* **View on board monitor test and component test**

\* **Retrieve protocol, VIN, Cal ID and CVN identifiers from ECU** (dependent on vehicle support)

\* **Enhanced Mode 6 functions**—Non-continuously Monitored Systems test results.


\* **Automatic VIN acquisition** and decoding makes it much easier to read manufacturer specific codes and enhanced mode 6 data

\* **Multi-lingual menu.** It supports English, French, German, Polish, Russian, Spanish, Italian, Portuguese, Hungarian, and Dutch.

\* Exquisitely designed - Ergonomic grip handle, bulging membrane switch, gilding metal pins

\* **A simple click from the short-cut menu to enter update mode**

\* Life- time **FREE** software and firmware update

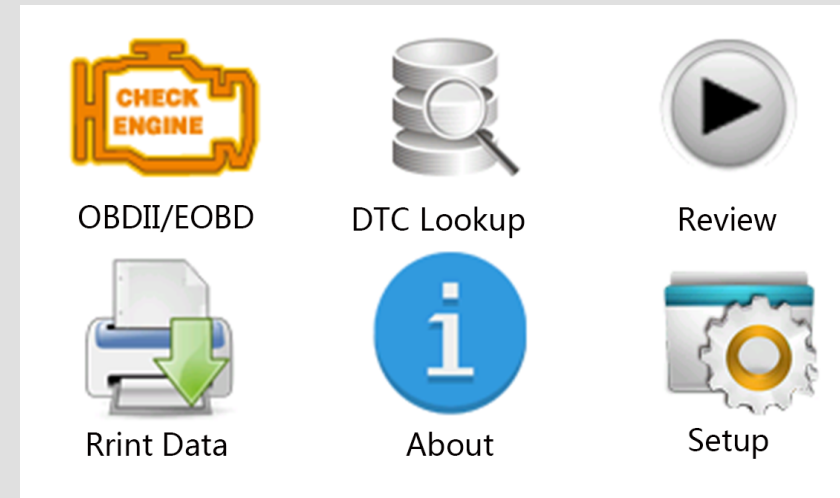

This driving cycle	
MIS	OK
FUEL	OK
CCM	OK
CAT	N/A
HCAT	N/A
EVAP	N/A
AIR	N/A

I/M Readiness			
MIL	!	IGN	Spark
DTC	0	Pd DTC	0
MIS	✓	EVAP	✓
FUE	✓	AIR	⊘
CCM	✓	O2S	✓
CAT	✓	HRT	✓
HCAT	⊘	EGR	✓

1/1

**P0100** \$07E8 Generic

-----

Mass or Volume Air Flow A  
Cir cuit

Main Menu

